


KA 111

SURGICAL CAPS

Surgical material is folded, cut, sewn and then the face opening is punched out. The surgical material width is folded machine in half as it's been fed into the machine, cut to length and then sewn with a radius on the top finishing off on the straight side. The face opening hole is punched out on the folded side the stacked into packs

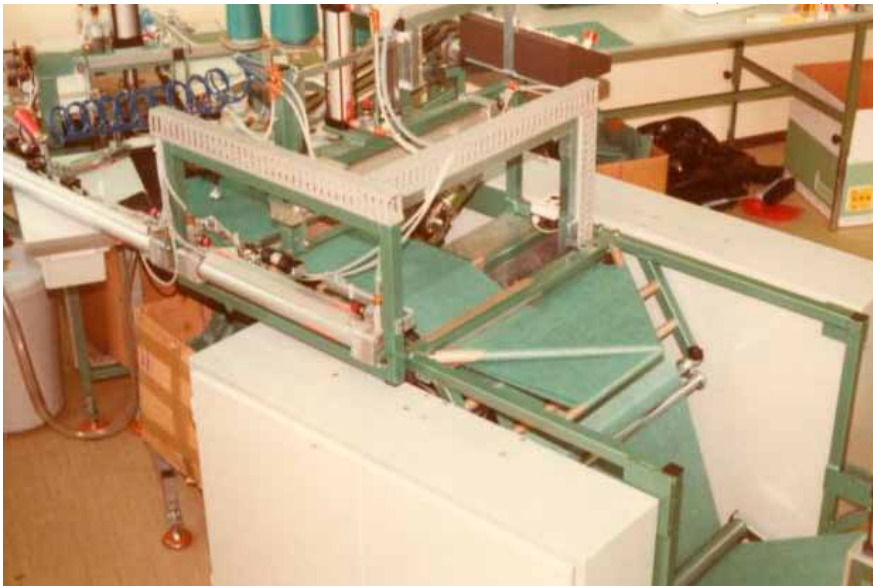

Technical info:

Folded in half and stacked into packs of 10, 25 or 50.



10 surgical caps per min.

Contact

Kinna Automatic AB
Box 133
511 22 KINNA
SWEDEN
VAT NO. SE5563746121

Tel: +46(0)320-20 54 80
Fax: +46(0)320-330 40/
E-Mail: info@kinnaautomatic.se
www.kinnaautomatic.se

Visitors and delivery address:
Maskingatan 10
511 62 SKENE
SWEDEN